


REQUIREMENTS: SEAT BASES & LOWERING TURNING SEAT BASES

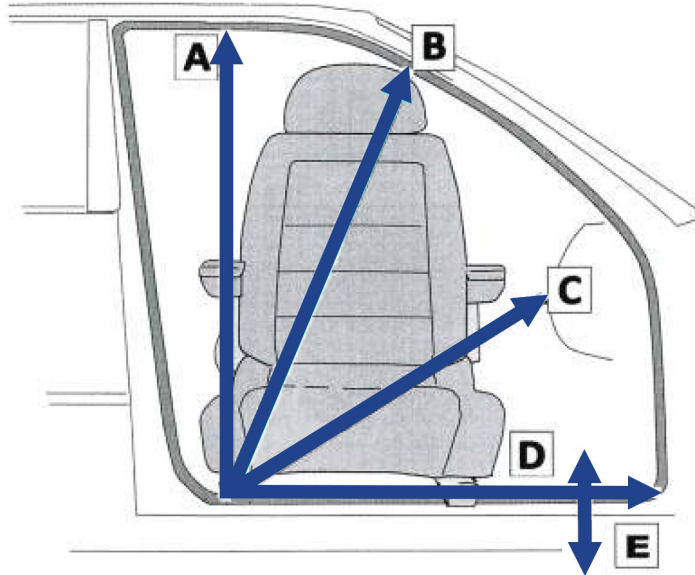

EC400: 245mm
C400: 375mm

Measurement A:

- For installing the **Turning Seat Base** there must be a distance of **950mm**
- For installing the **Lowering Turning Seat Base EC/C400** there must be a distance of **970mm**

Measurement B:

- For installing the **Turning Seat Base** there must be a distance of **830mm**
- For installing the **Lowering Turning Seat Base EC/C400** there must be a distance of **950mm**

Measurement C:

- For installing the **Turning Seat Base** there must be a distance of **630mm**
- For installing the **Lowering Turning Seat Base EC/C400** there must be a distance of **620mm**

Measurement D:

- For installing the **Turning Seat Base** there must be a distance of **650mm**
- For installing the **Lowering Turning Seat Base EC/C400** there must be a distance of **620mm**

Measurement E:

- For installing the **Lowering Turning Seat Base EC/C400** recommended distance is **425mm**

EC400 & C400

- The **EC400** provides **245mm** of exit distance from the vehicle (calculated from outer seat rail to back edge of seat base when fully lowered). The equivalent measure is **375mm** for the **C400**
- Width of the **EC/C400** is **500mm**
- Exit profile for the **EC/C400** is **105mm** (profile section exiting the vehicle that includes the swivel plate)